


Installation Guide

Model: ZL500

Lock Body: American Standard Mortise with 5 Latches

Version: 1.0


English

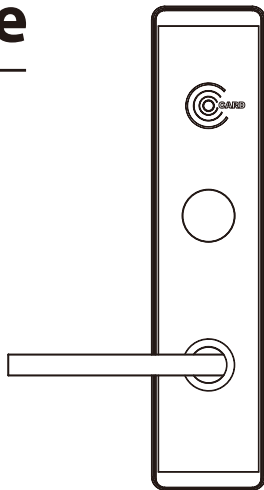


Cautions

1. A new lock is defined as always in open mode until it is locked once by a MiFare card.
2. Please register an authorised card, a time sync card, and a room card initially for the new lock.
3. The lock is equipped with keys for manual unlocking. Remove the keys from the package and keep them in a safe place.
4. To power on the lock, four alkaline AA batteries (not included) are required. Non-alkaline and rechargeable batteries ARE NOT RECOMMENDED.
5. Do not remove the batteries when the lock is in working state.
6. When the battery power is low, the lock will beep to remind the user to replace the batteries. Make sure not to mix up the polarities while replacing the batteries.
7. Avoid contact with corrosive substances. Do not hang any object on the handle.
8. The built-in software manages the operation of access cards. Please refer the software user manual.
9. For further queries, please contact the seller.


Packing List

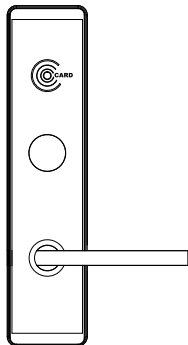

Outdoor Unit

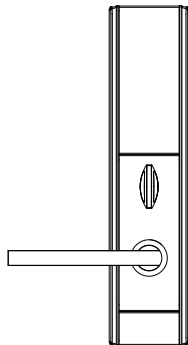

Indoor Unit



Mortise



Guidance Plate




Strike Plate



Box



Cylinder




Spindle A



Spindle B



Hex Wrench



Key



Vacuum Sucker



Studs



Screw A



Screw B




Screw C



Screw D

Installation Diagram

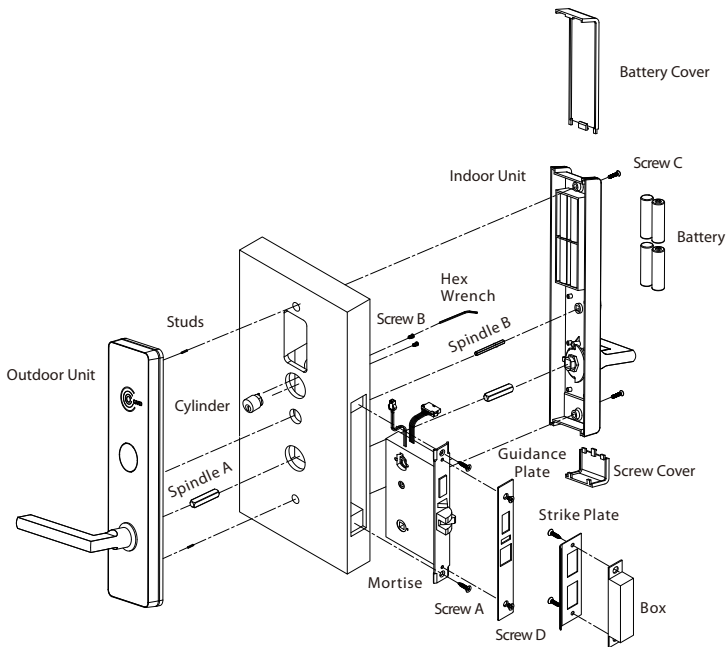


Door Properties

1. Door Thickness

Door Thickness	Spindle A	Spindle B	Screw C
35 to 45 mm	40 mm	75 mm	25 mm

Note: If the door is thicker than 45 mm, this lock will not be suitable. Please contact the sales person for queries.

2. Door Opening Direction

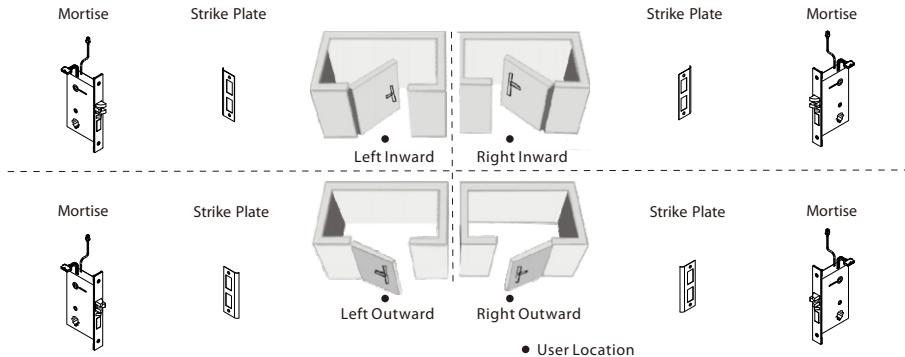


Note: Please install the Mortise and Strike Plate according to the above illustration.

Installation Procedure


1 Drill holes on the door

- 1) Place the installation template at the desired handle height.
- 2) Mark the holes to be drilled and drill the marked places.

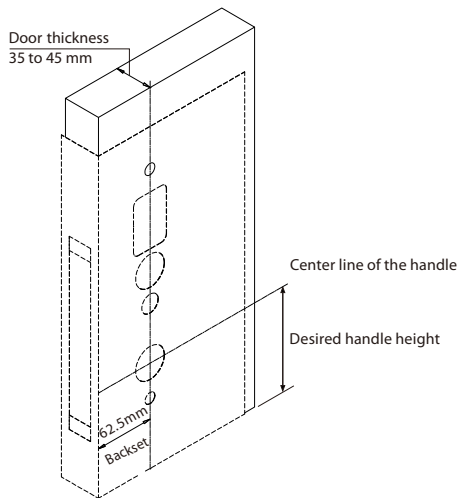


2 Remove the Guide Plate

Unscrew the Screw D and remove the Guide Plate.

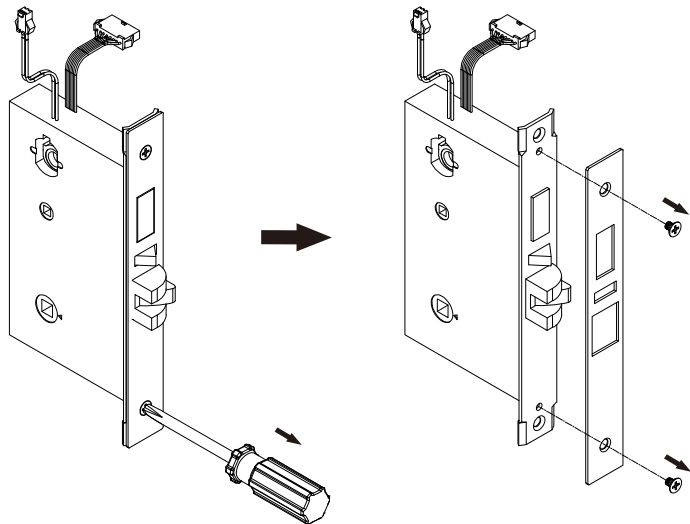


3 Installation of Mortise

Secure the Mortise with Screw A and Screw D. Make sure the latch angle faces the door post.

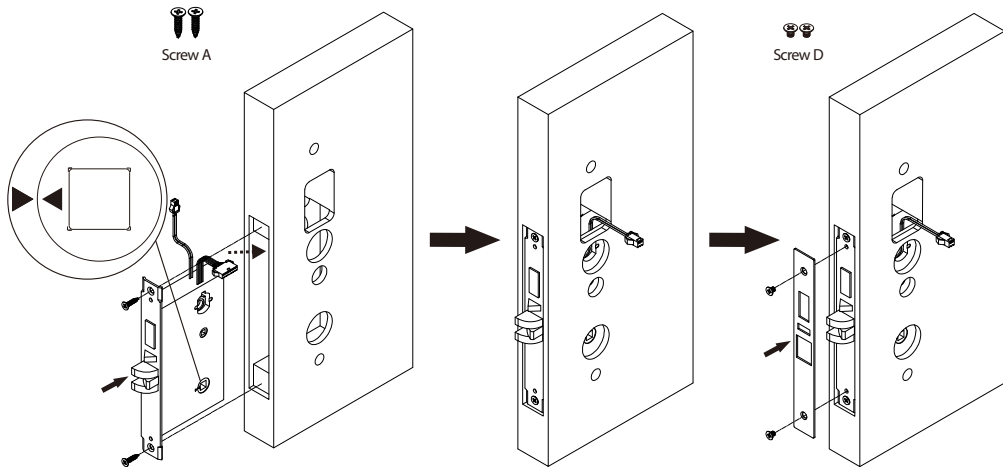


4 Installation of Lock Cylinder

Use the Hex Wrench to tighten the Screw B to secure the Cylinder.

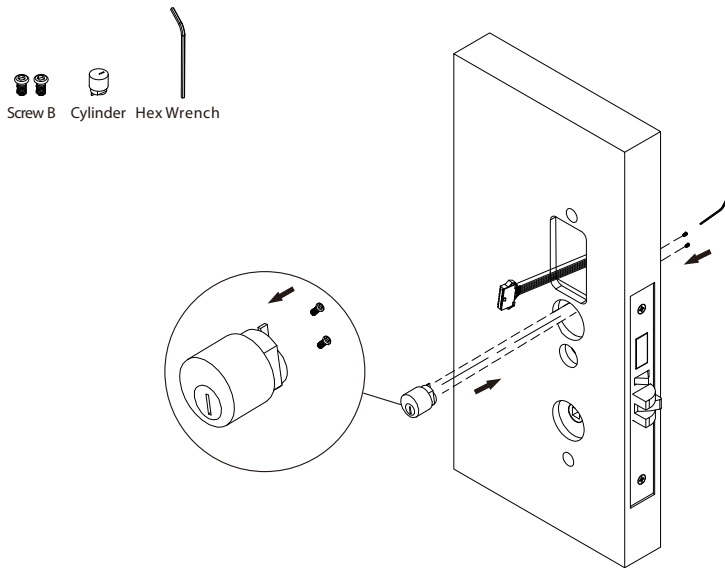

5 Installation of Spindles and Studs


- 1) Insert the Spindle A into the clutch, and make sure the triangles point each other. Secure the studs on the Outdoor Unit.
- 2) Insert the Spindle A and Spindle B into the drilled holes.

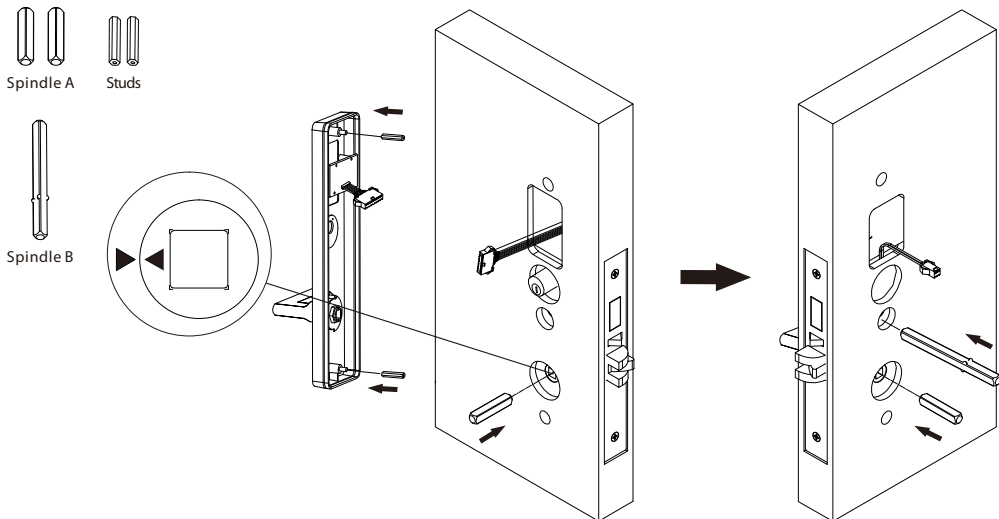

Note: Make sure that the two triangles are horizontally aligned to each other.


6 Installation of Outdoor Unit and Indoor Unit

- 1) Connect the cables of the Indoor Unit, Outdoor Unit, and Mortise.
- 2) Attach the Outdoor Unit and Indoor Unit on the door, and then secure them with Screw C.

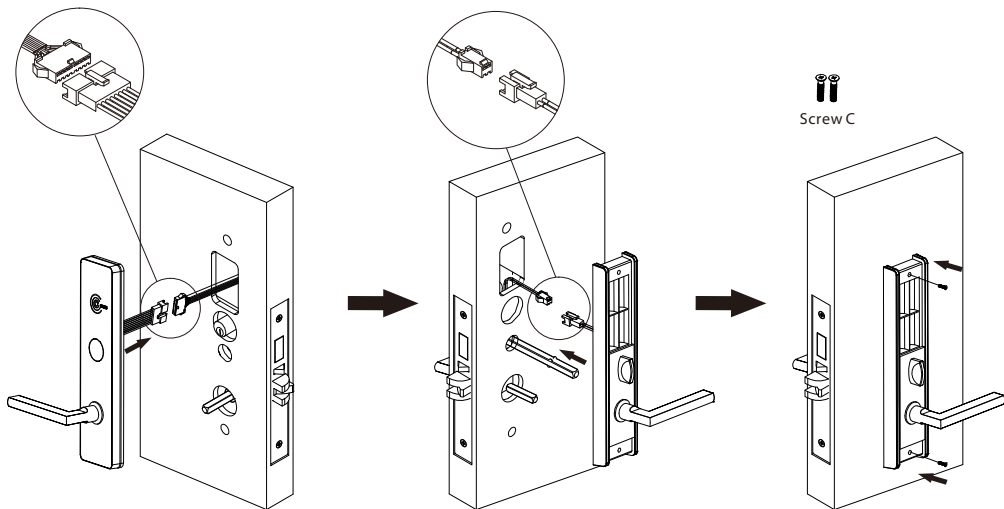


7 Battery and Cover Placement

Insert four Alkaline AA batteries and cover them with the battery cover. Then, cover the Screw C with a Screw Cover.

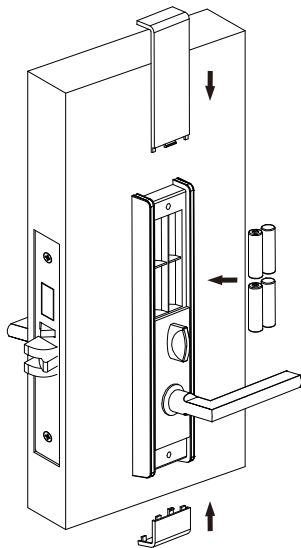

8 Installation of Strike Plate and Box


- 1) Make sure the Strike Box is aligned with the latch bolt. Then, use the installation template to drill the holes.
- 2) Align the Strike Plate and Box with the drilled holes and secure them with Screw A.

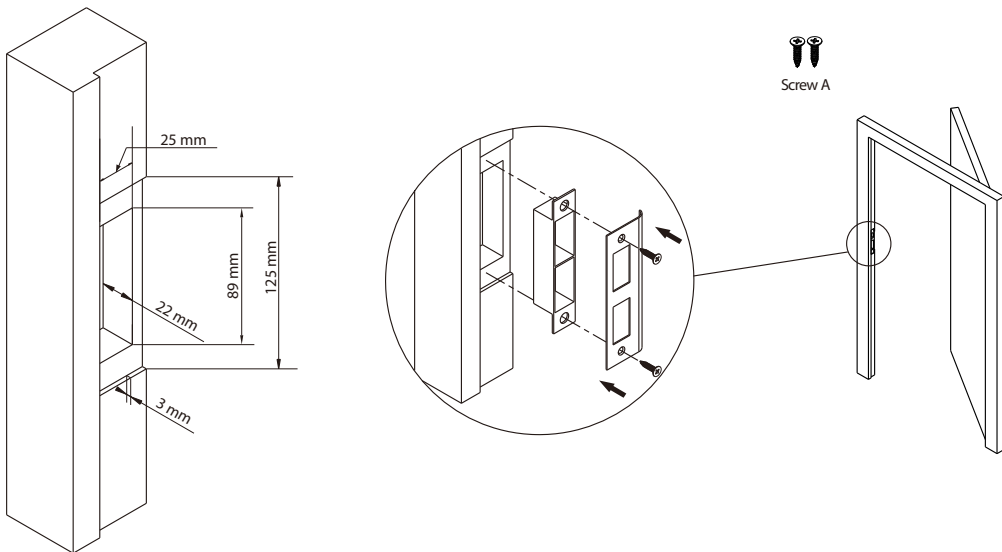

9 Test the lock with key

Step 1: Remove the cover on the key hole with the Vacuum Sucker.

Step 2: Insert the key into the key hole and rotate it by 90°, then rotate down the handle to open the door.

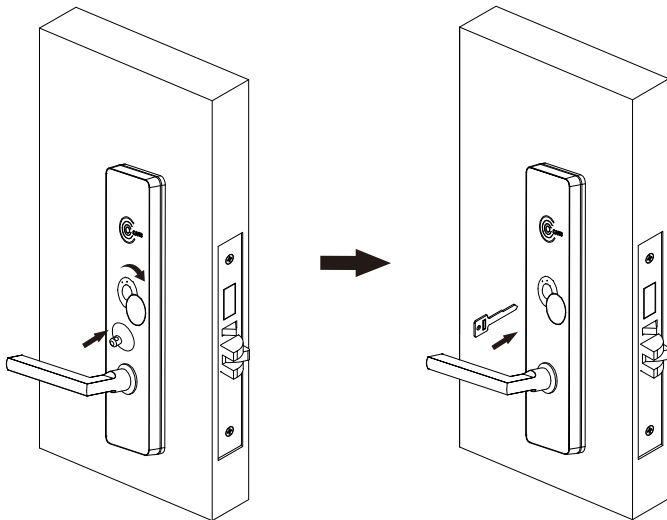


Guía de Instalación

Modelo: ZI500

Cerradura Hotelera de Estándar Americano de 5 Pestillos

Versión: 1.0


Español

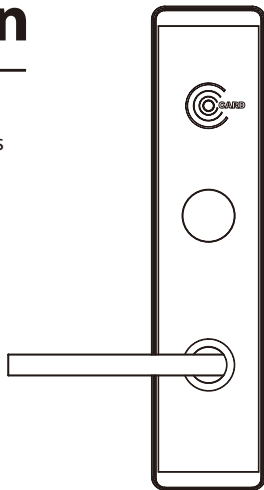


Precauciones

1. La cerradura por estándar se encuentra en modo siempre abierto hasta que se bloquee una vez con una tarjeta MiFare.
2. Registre una tarjeta autorizada, una tarjeta de sincronización de hora y una tarjeta de habitación inicialmente para la nueva cerradura.
3. La cerradura está equipada con llaves para desbloqueo manual. Saque las llaves del paquete y guárdelas en un lugar seguro.
4. Para encender la cerradura, se requieren cuatro pilas alcalinas AA (no incluidas). NO SE RECOMIENDAN pilas recargables y no alcalinas.
5. No quite las baterías cuando la cerradura esté en funcionamiento.
6. Cuando la carga de la batería es baja, la cerradura emitirá un pitido para recordarle al usuario que debe reemplazar las baterías. Asegúrese de no mezclar las polaridades al reemplazar las baterías.
7. Evite el contacto con sustancias corrosivas. No cuelgue ningún objeto de la manija.
8. El software integrado gestiona el funcionamiento de las tarjetas de acceso. Consulte el manual del usuario del software.
9. Para más consultas, póngase en contacto con el vendedor.


Contenido

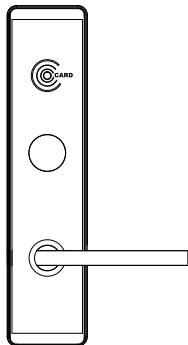

Unidad Exterior

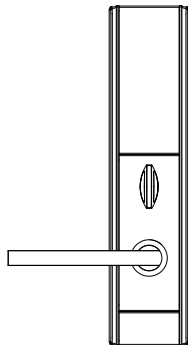

Unidad Interior



Mortaja



Placa Guía




Placa de
Contrachapa




Caja



Cilindro




Perno A



Perno B



Llave Hexagonal



Llave Mecánica



Ventosa de Succión



Taquetes



Tornillo A



Tornillo B




Tornillo C



Tornillo D

Diagrama de Instalación

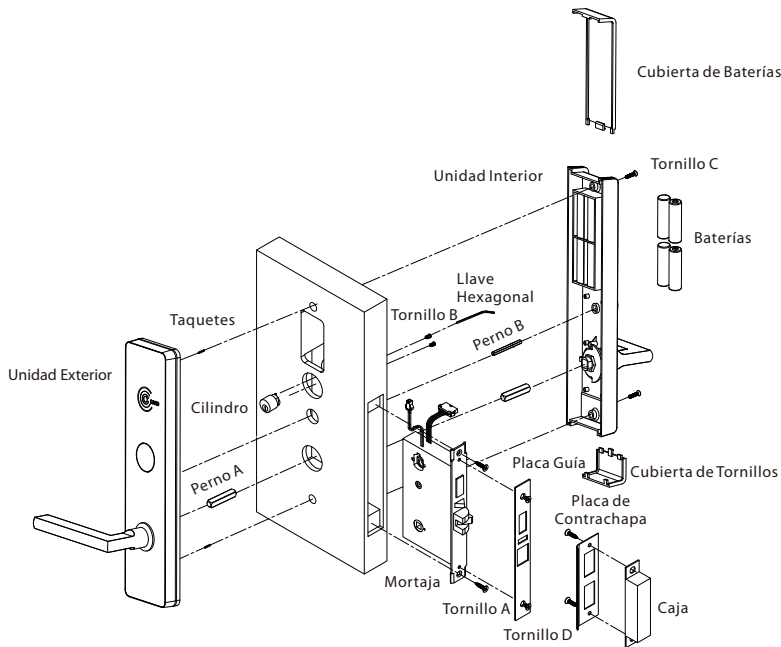


Propiedades de la Puerta

1. Grosor de Puerta

Grosor de Puerta	Perno A	Perno B	Tornillo C
35 to 45 mm	40 mm	75 mm	25 mm

Nota: Si la puerta es más gruesa de 45mm, esta cerradura no es apta para su proyecto. Por favor contacte a su agente de ventas.

2. Dirección de Apertura

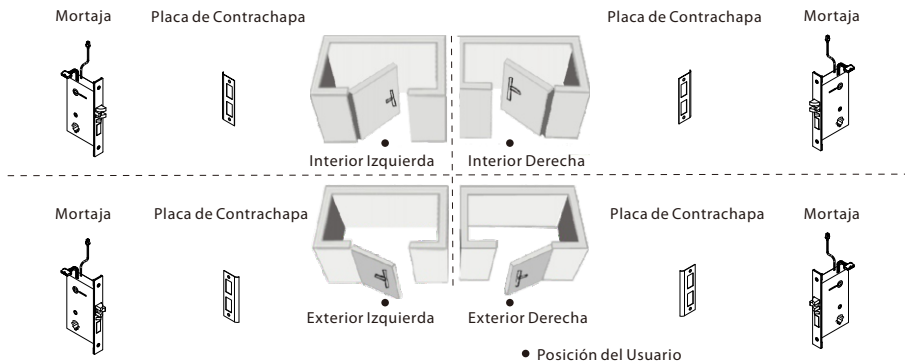


Nota: Por favor instale el mortaja y la placa de contrachapa de acuerdo a esta ilustración.

Proceso de Instalación


1 Realice los Agujeros en la Puerta

- 1) Coloque la plantilla de instalación a la altura deseada de la manija.
- 2) Marque los agujeros a perforar y perforo los lugares marcados.

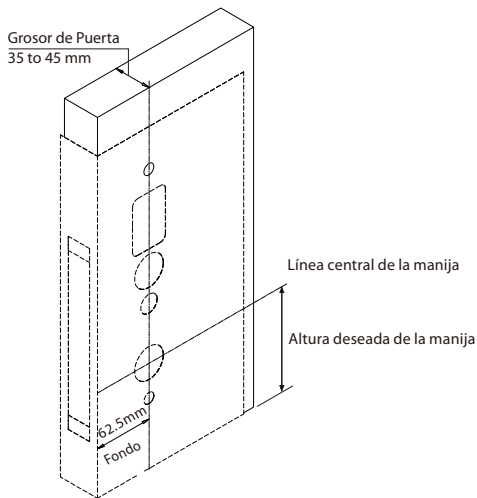


2 Remueva la Placa Guía

Desatornille el tornillo D y retire la placa guía.

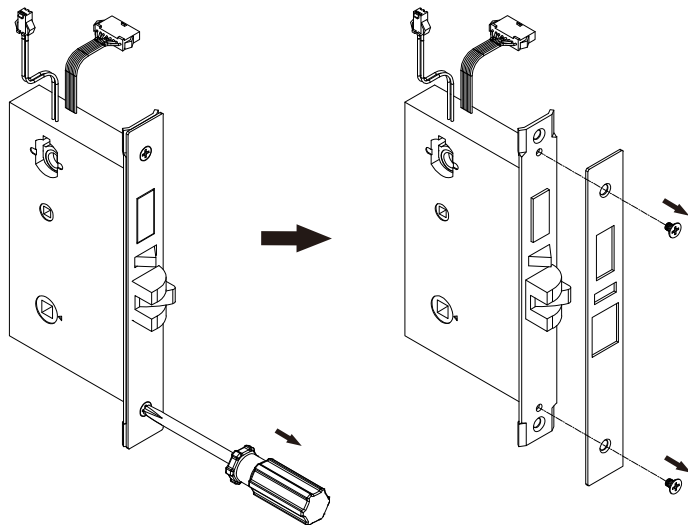


3 Instalación del Mortaja

Asegure el mortaja con el tornillo A y el tornillo D. Asegúrese de que el ángulo del pestillo mire hacia el marco de la puerta.

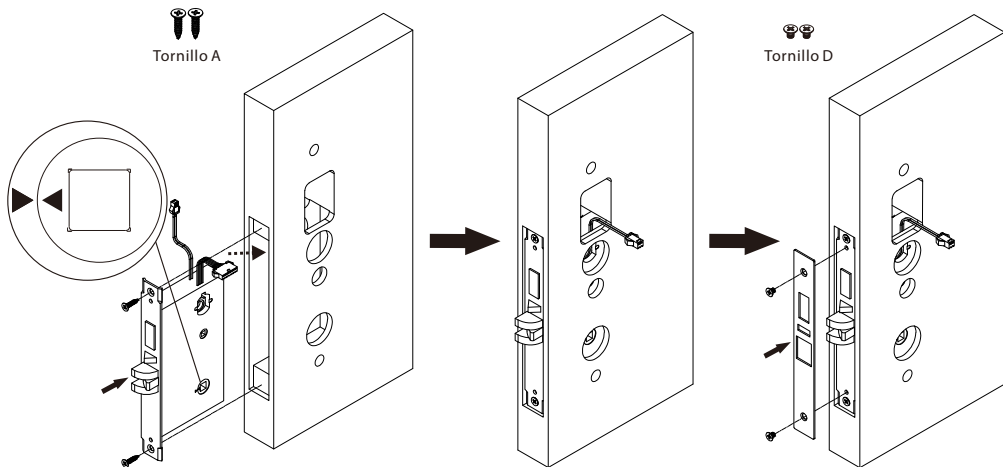

4 Instalación del Cilindro

Utilice la llave hexagonal para apretar los tornillos B para asegurar el cilindro.

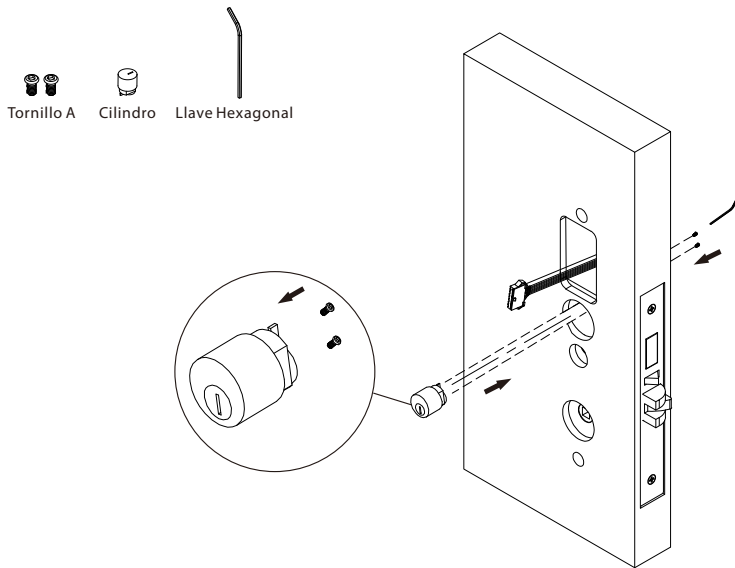

5 Instalación de los Pernos y Taquetes

- 1) Inserte el perno A en el embrague y asegúrese de que los triángulos se apunten entre sí. Asegure los taquetes en la unidad exterior.
- 2) Inserte el perno A y el perno B en los orificios perforados.




Perno A



Taquetes




Perno B

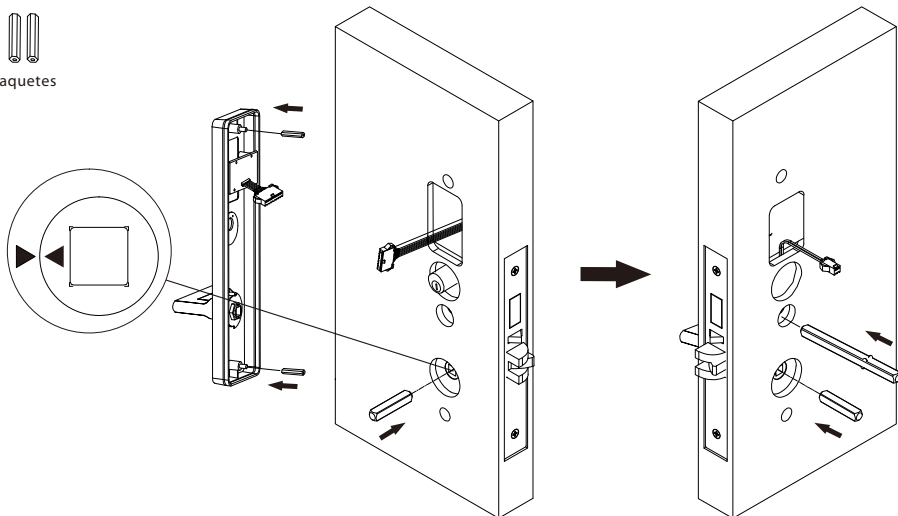

Nota: asegúrese de que los dos triángulos estén alineados horizontalmente entre sí.


6 Instalación de la Unidad Exterior e Interior

- 1) Conecte los cables de la unidad interior, la unidad exterior y el mortaja.
- 2) Coloque la unidad exterior y la unidad interior en la puerta y luego asegúrelas con el tornillo C.

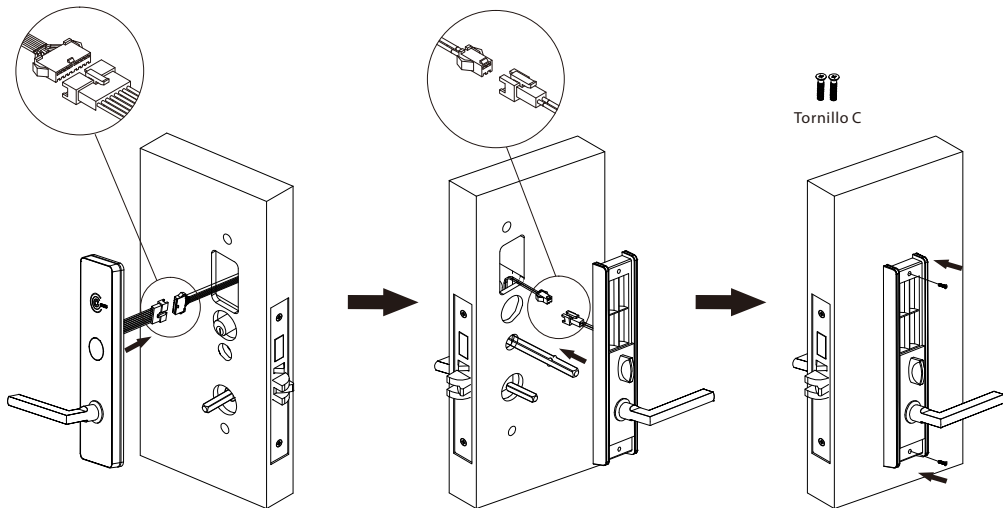



7 Colocar las Baterías y la Cubierta

Inserte cuatro pilas alcalinas AA y cúbralas con la tapa de las pilas. Luego, cubra el tornillo C con una tapa de tornillo.

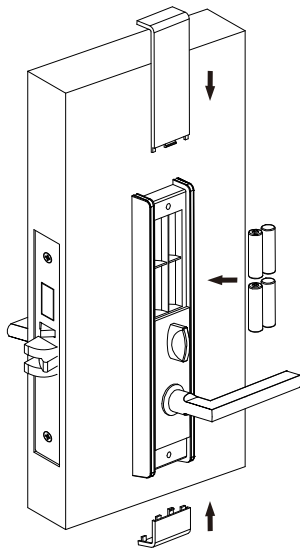

8 Instalación de la Placa de Contrachapa


- 1) Asegúrese de que la placa esté alineada con el pestillo. Luego, use la plantilla de instalación para perforar los agujeros.
- 2) Alinee la placa y la caja con los orificios perforados y asegúrelos con el tornillo A.

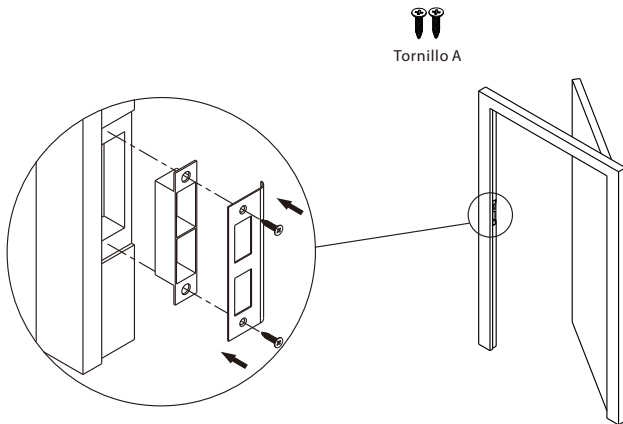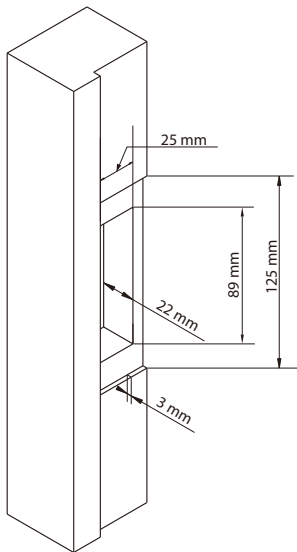

9 Pruebe la Cerradura con la Llave Mecanica

Paso 1: Retire la tapa del orificio de la cerradura con la ventosa de succión.

Paso 2: Inserte la llave en el orificio y gírela 90°, luego gire hacia abajo la manija para abrir la puerta.

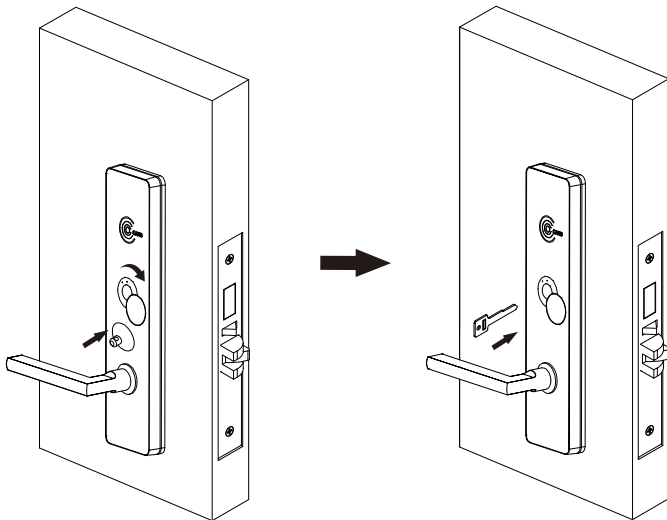



Warning:

This device complies with Part 15 of the FCC Rules. The operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF Radiation Exposure Statement:

- This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
- This equipment complies with RF radiation exposure limits set forth for an uncontrolled environment.

IMPORTANT! Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

ZKTeco Industrial Park, No. 32, Industrial Road,
Tangxia Town, Dongguan, China.

Phone : +86 769 - 82109991

Fax : +86 755 - 89602394

www.zkteco.com

Copyright © 2020 ZKTECO CO., LTD. All Rights Reserved.

